



FLEX I/O AC Digital Output Modules

Cat. No. 1794-OA8, 1794-OA8K, 1794-OA8I, 1794-OA16

(Modules with catalog numbers that end in K are conformally coated to meet noxious gas requirements of ISA/ANSI-71.040-1985 Class G3 Environment.)

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (Publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://www.literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc. is prohibited.

Throughout this manual we use notes to make you aware of safety considerations.

WARNING Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



IMPORTANT Identifies information that is critical for successful application and understanding of the product.

ATTENTION Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, or recognize the consequence



ATTENTION **Environment and Enclosure**
This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating.



This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR 11. Without appropriate precautions, there may be difficulties with electromagnetic compatibility in residential and other environments due to conducted and radiated disturbances.

This equipment is supplied as open-type equipment. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of 5VA, V2, V1, V0 (or equivalent) if non-metallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements
- NEMA Standard 250 and IEC 60529, as applicable, for explanations of the degrees of protection provided by enclosures

ATTENTION Do not remove or replace a terminal base unit while power is applied. Interruption of the backplane can result in unintentional operation or machine motion.



WARNING If you connect or disconnect wiring while the field side power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



ATTENTION



This product is grounded through the DIN rail to chassis ground. Use zinc plated yellow-chromate steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately.

WARNING



For Class I Division 2 applications, use only Class I Division 2 listed or recognized accessories and modules approved for use within the 1794 platform.

North American Hazardous Location Approval

The following output modules are North American Hazardous Location approved: 1794-OA8, 1794-OA8K, 1794-OA8I and 1794-OA16.

The following information applies when operating this equipment in hazardous locations:	Informations sur l'utilisation de cet équipement en environnements dangereux :
Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.	Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.
WARNING <p>EXPLOSION HAZARD</p> <ul style="list-style-type: none"> • Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous. • Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product. • Substitution of components may impair suitability for Class I, Division 2. • If this product contains batteries, they must only be changed in an area known to be nonhazardous. 	AVERTISSEMENT <p>RISQUE D'EXPLOSION</p> <ul style="list-style-type: none"> • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement. • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit. • La substitution de composants peut rendre cet équipement inadéquat à une utilisation en environnement de Classe I, Division 2. • S'assurer que l'environnement est classé non dangereux avant de changer les piles.

European Hazardous Location Approval

The following module is European Zone 2 approved: 1794-OA8K.

The following applies when the product bears the Ex Marking:

This equipment is intended for use in potentially explosive atmospheres as defined by European Union Directive 94/9/EC and has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of Category 3 equipment intended for use in Zone 2 potentially explosive atmospheres, given in Annex II to this Directive.

Compliance with the Essential Health and Safety Requirements has been assured by compliance with EN 60079-15 and EN 60079-0.

WARNING



Observe the following additional Zone 2 certification requirements.

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment must be installed in an enclosure providing at least IP54 protection when applied in Zone 2 environments.
- This equipment shall be used within its specified ratings defined by Rockwell Automation.
- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 40% when applied in Zone 2 environments.
- This equipment must be used only with ATEX certified Rockwell Automation terminal bases.
- Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
- Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.

ATTENTION




Prevent Electrostatic Discharge

This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.

Install Your FLEX I/O AC Digital Output Module

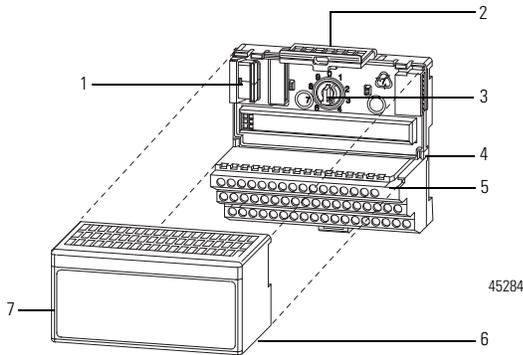

The module mounts on a 1794 terminal base.

WARNING



1794-TBNF and 1794-TBNFK are not approved for Class I Division 2 Applications.

1. Rotate the keyswitch (3) on the terminal base (4) clockwise to position 8 as required for this type of module.
2. Make certain the FlexBus connector (1) is pushed all the way to the left to connect with the neighboring terminal base/adaptor. **You cannot install the module unless the connector is fully extended.**
3. Make sure the pins on the bottom of the module are straight so they will align properly with the connector in the terminal base.

WARNING



If you insert or remove the module while backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

4. Position the module (7) with its alignment bar (6) aligned with the groove (5) on the terminal base.

5. Press firmly and evenly to seat the module in the terminal base unit. The module is seated when the latching mechanism (2) is locked into the module.

Connecting Wiring for the 1794-OA8 and 1794-OA8K

1. **For 1794-TB2, 1794-TB3, or 1794-TB3S:** Connect individual output wiring to even numbered terminals on the 0...15 row (A) as indicated in the table, Wiring Connections for the 1794-OA8 and 1794-OA8K.
For 1794-TBN or 1794-TBNF: Connect individual output wiring to even numbered terminals on the 16...33 row (B) as indicated in the table below.
2. **For 1794-TB2, 1794-TB3, or 1794-TB3S:** Connect the associated V AC common (L2) lead of the output device to the corresponding odd numbered terminal on the 0...15 row (A) for each output as indicated in the table below; or to the corresponding terminal on the 16...33 row (B). (The V AC common (L2) terminals of row (B) and the odd numbered terminals of row (A) are internally connected together.)
For 1794-TBN or 1794-TBNF: Connect the associated V AC common (L2) lead of the output device to the corresponding odd numbered terminal on the 34...51 row (C) for each output as indicated in the table below. (The odd numbered terminals of row (C) are internally connected together to V AC L2 common.)
3. Connect V AC power L1 to terminal 34 on the 34...51 row (C).
4. Connect V AC common L2 to terminal 16 on the 16...33 row (B).
5. If daisy chaining V AC power (L1) to the next terminal base, connect a jumper from terminal 51 (V AC L1) on this base unit to terminal 34 on the next base unit.
6. If continuing V AC common (L2) to the next base unit, connect a jumper from terminal 33 (V common L2) on this base unit to terminal 16 on the next base unit.

IMPORTANT

Total current draw through terminal base connection is limited to 10A. Separate power connections to each terminal base may be necessary.

ATTENTION



If multiple power sources are used for 1794-OA8I, do not exceed the specified isolation voltage.

Wiring Connections for the 1794-OA8 and 1794-OA8K


Output ⁽¹⁾	1794-TB2, 1794-TB3, 1794-TB3S		1794-TBN, 1794-TBNF	
	Output Terminal	Common Terminal (L2) ⁽¹⁾	Output Terminal	Common Terminal (L2) ⁽²⁾
0	A-0	A-1/B-17	B-0	C-1
1	A-2	A-3/B-19	B-2	C-3
2	A-4	A-5/B-21	B-4	C-5
3	A-6	A-7/B-23	B-6	C-7
4	A-8	A-9/B-25	B-8	C-9
5	A-10	A-11/B-27	B-10	C-11
6	A-12	A-13/B-29	B-12	C-13
7	A-14	A-15/B-31	B-14	C-15

A = Output terminals (Even numbered terminals 0...14)
 B = Common terminals
 C = Power terminals (C-34 and C-51 on 1794-TB2; C-34...C-51 on 1794-TB3 and 1794-TB3S)
 B = Even numbered output terminals 0...14, AC common terminals 16 and 33
 C = Power terminals C-34 and C-51, and odd numbered output terminals 1...15

⁽¹⁾ A-1, 3, 5, 7, 9, 11, 13 and 15 on the 1794-TB2, 1794-TB3 and 1794-TB3S are internally connected in the module to 120V AC common (L2).

⁽²⁾ C-1, 3, 5, 7, 9, 11, 13 and 15 on the 1794-TBN and 1794-TBNF are internally connected in the module to 120V AC common (L2).


1794-TB2, 1794-TB3 and 1794-TB3S Terminal Base Wiring for the 1794-OA8

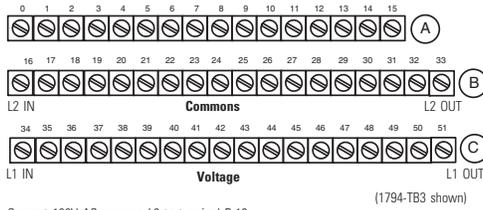

Connect 120V AC common L2 to terminal B-16.
 Connect 120V AC power L1 to terminal C-34.
 (Use B-33 and C-51 for daisy-chaining power to the next terminal base unit.)
 (Terminals C-35...C-50 are not present on the 1794-TB2.)

45671


1794-TB2, 1794-TB3, 1794-TB3S Terminal Base Wiring for 1794-OA8I

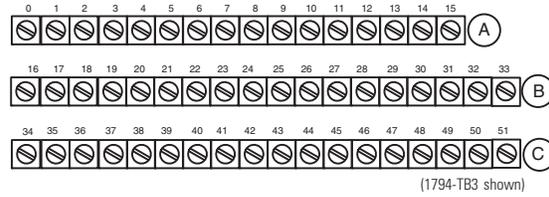

Connect outputs to even numbered terminals on row (A)
 Connect isolated 120V AC (L1) to odd numbered terminals on row (A)
 Individual isolated 120V AC common (L2) must be run externally to each of the output devices
 (Terminals C-35...C-50 are not available on the 1794-TB2.)

45673


1794-TBN and 1794-TBNF Terminal Base Wiring for the 1794-OA8

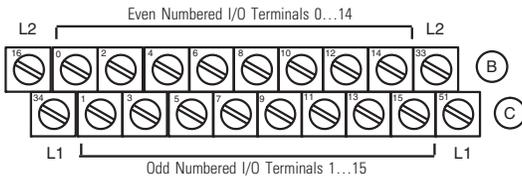

Connect 120V AC (L2) to terminal B-16
 Connect 120V AC power (L1) to terminal C-34
 Use B-33 and C-51 for daisy-chaining to the next terminal base

45672

1794-TBN and 1794-TBNF Terminal Base Wiring for the 1794-OA8I

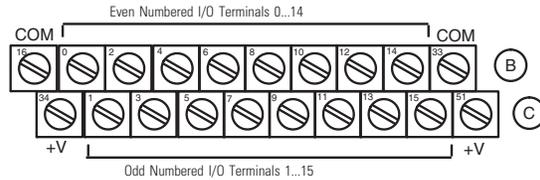

Connect outputs to even numbered terminals on row (B).
 Connect isolated 120V AC (L1) to odd numbered terminals on row (C).
 Individual isolated 120V AC common (L2) must be run externally to each of the output devices.

45674

Connecting Wiring for the 1794-OA8I

- For 1794-TB2, 1794-TB3, or 1794-TB3S: Connect individual output wiring to the even numbered terminals on the 0...15 row (A).
 For 1794-TBN or 1794-TBNF: Connect individual output wiring to the even numbered terminals on the 16...33 row (B).
- For 1794-TB2, 1794-TB3, or 1794-TB3S: Connect the associated V AC power lead (L1) to the corresponding odd numbered terminal on the 0...15 row (A) for each output as indicated in the table below.
 For 1794-TBN or 1794-TBNF: Connect the associated V AC power (L1) lead to the odd numbered terminals on row (C).

IMPORTANT Individual isolated 120V AC common (L2) leads must be run externally to each output device.

Wiring Connections for the 1794-OA8I

Output ⁽¹⁾	1794-TB2, 1794-TB3, 1794-TB3S		1794-TBN, 1794-TBNF	
	Output Terminal	120V AC Supply ⁽¹⁾	Output Terminal	120V AC Supply ⁽²⁾
0	A-0	A-1	B-0	C-1
1	A-2	A-3	B-2	C-3
2	A-4	A-5	B-4	C-5
3	A-6	A-7	B-6	C-7
4	A-8	A-9	B-8	C-9
5	A-10	A-11	B-10	C-11
6	A-12	A-13	B-12	C-13
7	A-14	A-15	B-14	C-15

⁽¹⁾ A = Even numbered terminals 0...14 for customer connections; corresponding odd numbered 120V AC supply L1 terminals 1...15 for customer connections from isolated power supply.
⁽²⁾ B = Even numbered terminals 0...14 for customer connections; C = Odd numbered 120V AC supply L1 terminals 1...15 for customer connections from isolated power supply.

Connecting Wiring for the 1794-OA16

- For 1794-TB2, 1794-TB3, or 1794-TB3S: Connect individual output wiring to numbered terminals on the 0...15 row (A) as indicated in the table below.
 For 1794-TBN: Connect individual output wiring to terminals 0...15 on rows B and C.
- For 1794-TB2, 1794-TB3 or 1794-TB3S: Connect the associated V AC common (L2) lead of the output device to the corresponding numbered terminal on the 16...33 row (B) for each output as indicated in the table below. (The V AC common terminals of row (B) are internally connected together).
 For 1794-TBN: Auxiliary terminal blocks are required to connect the associated L2 common for each channel. Connect the L2 side of the load together and then connect to L2 on the power supply.
- Connect 120V AC power L1 to terminal 34 on the 34...51 row (C).
- Connect 120V AC common L2 to terminal 16 on the 16...33 row (B).
- If daisy-chaining power to the next terminal base, connect a jumper from terminal 51 (120V AC L1) on this base unit to terminal 34 on the next base unit.
- If continuing 120V AC common (L2) to the next base unit, connect a jumper from terminal 33 (120V AC common L2) on this base unit to terminal 16 on the next base unit.

IMPORTANT Total current draw through terminal base connection is limited to 10 A. Separate power connections to each terminal base may be necessary.

Wiring Connections for 1794-OA16

Output Channel	1794-TB2, 1794-TB3, 1794-TB3S		1794-TBN
	Output Terminal	120V AC Common (L2)	Output Terminal ⁽¹⁾
0	A-0	B-17	B-0
1	A-1	B-18	C-1
2	A-2	B-19	B-2
3	A-3	B-20	C-3
4	A-4	B-21	B-4
5	A-5	B-22	C-5
6	A-6	B-23	B-6
7	A-7	B-24	C-7
8	A-8	B-25	B-8
9	A-9	B-26	C-9

Wiring Connections for 1794-0A16


Output Channel	1794-TB2, 1794-TB3, 1794-TB3S		1794-TBN
	Output Terminal	120V AC Common (L2)	Output Terminal ⁽¹⁾
10	A-10	B-27	B-10
11	A-11	B-28	C-11
12	A-12	B-29	B-12
13	A-13	B-30	C-13
14	A-14	B-31	B-14
15	A-15	B-32	C-15

120V AC L1 power Connect V AC L1 to C-34. 1794-TB3, 1794-TB3S – Power terminals C-34...C-51 are internally connected together. 1794-TB2 and 1794-TBN – C-34 and C-51 are internally connected together.

120V AC L2 common Connect 120V AC common L2 to terminal B-16. 1794-TB3, 1794-TB3S – 120V AC common L2 terminals B-16...B-33 are internally connected together. 1794-TB2, 1794-TBN – 120V AC common L2 terminals B-16 and B-33 internally connected together.


⁽¹⁾ Auxiliary terminal blocks are required to connect the associated L2 common for each channel when using a 1794-TBN terminal base with the 1794-0A16.

1794-TB2, 1794-TB3, 1794-TB3S Terminal Base Wiring for 1794-0A16

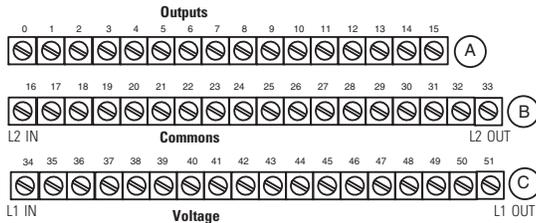

Connect 120V AC common L2 to terminal B-16.
 Connect 120V AC power L1 to terminal C-34.
 (Use B-33 and C-51 for daisy-chaining power to the next terminal base unit.)
 (Terminals C-35...C-50 are not present on the 1794-TB2.) 45675

1794-TBN Terminal Base Wiring for 1794-0A16

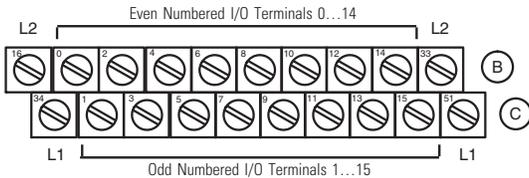

Connect 120V AC (L2) to terminal B-16
 Connect 120V AC power (L1) to terminal C-34
 Use B-33 and C-51 for daisy-chaining to the next terminal base 45676

Configure the FLEX I/O AC Output Module

Image Table Memory Map for the 1794-0A8, 1794-0A8K and 1794-0A8I

Dec	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Oct	17	16	15	14	13	12	11	10	7	6	5	4	3	2	1	0
Read	Not used – set to 0															
Write	Not used – set to 0															
	07 06 05 04 03 02 01 00															

Where: 0 = Output number

Image Table Memory Map for the 1794-0A16

Dec	15	14	13	12	11	10	09	08	7	6	5	4	3	2	1	0
Oct	17	16	15	14	13	12	11	10	7	6	5	4	3	2	1	0
Read	Not used – set to 0															
Write	015	014	013	012	011	010	09	08	07	06	05	04	03	02	01	00

Where: 0 = Output number

Specifications

Specifications for 1794-0A8, 1794-0A8K and 1794-0A8I

Attribute	1794-0A8, 1794-0A8K	1794-0A8I
Number of outputs	8, (1 group of 8), nonisolated	8, isolated
Module location	1794-TB2, 1794-TB3, 1794-TB3S, 1794-TBN and 1794-TBNF	
Output voltage range	85V AC, min 120V AC, nom 132V AC, max	
Output current rating	4.0A (8 outputs @ 500 mA)	
On-state current	5.0 mA per output min 500 mA per output max @ 55 °C (sufficient to operate an Allen-Bradley Bulletin 500 NEMA size 3 motor starter) 750 mA per output max @ 35 °C 1.0A on 4 nonadjacent outputs, 500 mA on the remaining 4 outputs @ 30 °C NOTE: Below 50 mA the voltage drop across the module will be higher and the voltage waveform may have some small oscillation (less than 5V).	
Voltage drop, on-state, max	1.0V @ 0.5A	
Leakage current, off-state, max	2.25 mA	
Surge current	7A for 40 ms, repeatable every 8 s	
Output signal delay ⁽¹⁾	Off to On On to Off	
Power dissipation, max	4.1W @ 0.5A 6.3W @ 0.75A 6.3W @ 1.0A	
Thermal dissipation	14.0 BTU/hr @ 0.5 A 21.2 BTU/hr @ 0.75 A 21.4 BTU/hr @ 1.0 A	
FlexBus current	80 mA @5V DC	
Fusing ⁽²⁾	1.6A, 250V AC slow-blow, Littelfuse 23901.6; San-0 SD6-1.6 (1.6A fuses come preinstalled in 1794-TBNF terminal base units.)	

⁽¹⁾ Output signal delay is the time from receipt of an output on or off command to the output actually turning on or off.
⁽²⁾ Module outputs are not fused. Fusing is recommended. If fusing is desired, you must supply external fusing or use the 1794-TBNF terminal base, if recommended.

Specifications for 1794-0A16

Attribute	Value
Number of outputs	16, nonisolated
Module location	1794-TB2, 1794-TB3, 1794-TB3S and 1794-TBN ⁽³⁾
Mounting	See derating curve
Output voltage range	74V AC min, 47...63 Hz 120V AC nom, 47...63 Hz 132V AC max, 47...63 Hz
Output current rating	4.0A (16 outputs @ 250 mA) Attention: If using 0.5A outputs, alternate wiring so that no two 0.5 A outputs are next to each other.
On-state current	5.0 mA per output, min 500 mA per output @ 55 °C, max NOTE: Below 50 mA the voltage drop across the module will be higher and the voltage waveform may have some small oscillation (less than 5V).
On-state voltage drop, max	1.5V @ 0.5 A
Off-state leakage current, max	2.25 mA
Surge current	7 A for 40 ms, repeatable every 8 s
Output signal delay ⁽¹⁾	Off to On On to Off
Power dissipation, max	4.7W @ 0.5A
Thermal dissipation	16.1 BTU/hr @ 0.5 A
FlexBus current	80 mA @ 5V DC
Fusing ⁽²⁾	2.5A, 150V AC normal blow, MQ2

- (1) Auxiliary terminal blocks are required to connect the associated 120V AC common for each channel when using the 1794-TBN terminal base with the 1794-OA16.
- (2) Output signal delay is the time from receipt of an output on or off command to the output actually turning on or off.
- (3) Module outputs are not fused. Fusing is recommended. If fusing is desired, you must supply external fusing or use the 1794-TBNF terminal base, if recommended.

General Specifications

Attribute	Value
Terminal base screw torque	Determined by installed terminal base
Dimensions (with module installed), HxWxD	94 x 94 x 69 mm (3.7 x 3.7 x 2.7 in.)
Indicators (field side indication, logic driven)	8 yellow status indicators – for 1794-OA8, 1794-OA8K 8 yellow status indicators – for 1794-OA8I 16 yellow status indicators – for 1794-OA16
Supply voltage or voltage ranges	FlexBus: 5V DC, 80 mA Output: 120V AC, 50/60 Hz, 0.5 A, Pilot Duty, 4 A total
Isolation voltage	120V (continuous), Basic Insulation Type, field side to backplane No isolation between individual channels Type tested @ 1250V AC for 60 s
Pilot Duty Rating	5 A Inrush
Keypad position	8
Enclosure type rating	None (open-style)
North American Temp Code	T4A – for 1794-OA8, 1794-OA8K, 1794-OA8I only T4 – for 1794-OA16 only
IEC temp code	T4 – for 1794-OA8K only
Wire size	Determined by installed terminal base
Wiring Category ⁽¹⁾	2 – on signal ports

- (1) Use this Conductor Category information for planning conductor routing. Refer to Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#).

Environmental Specifications

Attribute	Value
Temperature, operating	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): 0...55 °C (32...131 °F)
Temperature, nonoperating	IEC 60068-2-1 (Test Ab, Un-packaged Non-operating Cold), IEC 60068-2-2 (Test Bb, Un-packaged Non-operating Dry Heat), IEC 60068-2-14 (Test Na, Un-packaged Non-operating Thermal Shock): -40...85 °C (-40...185 °F)
Temperature, surrounding air, max	55 °C (131 °F)
Relative humidity	IEC 60068-2-30 (Test Db, Unpackaged Damp Heat): 5...95% noncondensing
Vibration	IEC60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz
Shock, operating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 30 g
Shock, nonoperating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 50 g
Emissions	CISPR 11: Group 1, Class A (with appropriate enclosure)
ESD immunity	IEC 61000-4-2: 4 kV contact discharges 8 kV air discharges
Radiated RF immunity	(1794-OA8, 1794-OA8K) IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 30...2000 MHz 10V/m with 200 Hz 50% Pulse 100% AM @ 900 MHz 1V/m with 1 kHz sine-wave 80% AM from 2000...2700 MHz (1794-OA8I) IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 30...2000 MHz 1V/m with 1 kHz sine-wave 80% AM from 2000...2700 MHz (1794-OA16) IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 80...2000 MHz 10V/m with 200 Hz 50% Pulse 100% AM @ 900 MHz 10V/m with 200 Hz 50% Pulse 100% AM @ 1890 MHz 3V/m with 1 kHz sine-wave 80% AM from 2000...2700 MHz
Vibration	IEC 60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz
EFT/B immunity	IEC 61000-4-4: ±2 kV at 5 kHz on signal ports

Environmental Specifications


Attribute	Value
Surge transient immunity	IEC 61000-4-5: ±1 kV line-line(DM) and ±2 kV line-earth(CM) on signal ports
Conducted RF immunity	(1794-OA8, 1794-OA8K, 1794-OA8I) IEC 61000-4-6: 10V rms with 1 kHz sine-wave 80% AM from 150 kHz...30 MHz (1794-OA16) IEC 61000-4-6: 10V rms with 1 kHz sine-wave 80% AM from 150 kHz...80 MHz
Oscillatory surge withstand	IEEE C37.90.1: 2.5 kV

Certifications

Certifications (when product is marked) ⁽¹⁾	Value
UL	UL Listed Industrial Control Equipment. See UL File E65584.
CSA (for 1794-OA8, 1794-OA8K, and 1794-OA8I only)	CSA Certified Process Control Equipment. See CSA File LR54689C. CSA Certified Process Control Equipment for Class I, Division 2 Group A,B,C,D Hazardous Locations. See CSA File LR69960C.
CSA (for 1794-OA16 only)	CSA Certified Process Control Equipment. See CSA File LR93701. CSA Certified Process Control Equipment for Class I, Division 2 Group A,B,C,D Hazardous Locations. See CSA File LR93701.
CE	European Union 2004/108/EC EMC Directive, compliant with: EN 61326-1; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity EN 61000-6-4; Industrial Emissions EN 61131-2; Programmable Controllers (Clause 8, Zone A & B) European Union 2006/95/EC LVD, compliant with: EN 61131-2; Programmable Controllers (Clause 11)
C-Tick	Australian Radiocommunications Act, compliant with: AS/NZS CISPR 11; Industrial Emissions
Ex (for 1794-OA8K only)	European Union 94/9/EC ATEX Directive, compliant with: EN 60079-15; Potentially Explosive Atmospheres, Protection "n" EN 60079-0; General Requirements II 3 G Ex nA nC IIC T4 X

- (1) See the Product Certification link at <http://www.ab.com> for Declarations of Conformity, Certificates, and other certification details.

Derating Curve for 1794-OA16

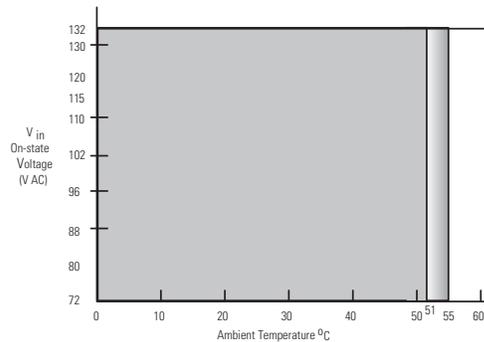

The area within the curve represents the safe operating range for the module under various conditions of user supplied 120V AC supply voltages and ambient temperatures.

= Normal mounting safe operating range. Includes
 = Other mounting positions (including inverted horizontal, vertical) safe operating range

45677

Mounting	Temperature, max.
Normal horizontal	55 °C
Other mounting positions (including inverted horizontal, vertical)	51 °C

Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products.

At <http://www.rockwellautomation.com/support/>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://www.rockwellautomation.com/support/>.

Installation Assistance

If you experience a problem within the first 24 hours of installation, review the information that is contained in this manual. You can contact Customer Support for initial help in getting your product up and running.

United States or Canada	1.440.646.3434
Outside United States or Canada	Use the Worldwide Locator at http://www.rockwellautomation.com/support/americas/phone_en.html , or contact your local Rockwell Automation representative.

New Product Satisfaction Return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846